



Nikon Coolpix S3100 Camera Battery Replacement

A short step-by-step guide on how to replace the battery in a Nikon Coolpix S3100 camera model.

Written By: Jorge



INTRODUCTION

In order for the Nikon Coolpix S3100 to even function, you must install a battery successfully using this step-by-step guide.



PARTS:


- [EN-EL19](#) (1)
 - [Lenmar Replacement Battery DLZ319N](#) (1)
-

Step 1 — Battery





- Place camera with the LCD screen facing you.

Step 2

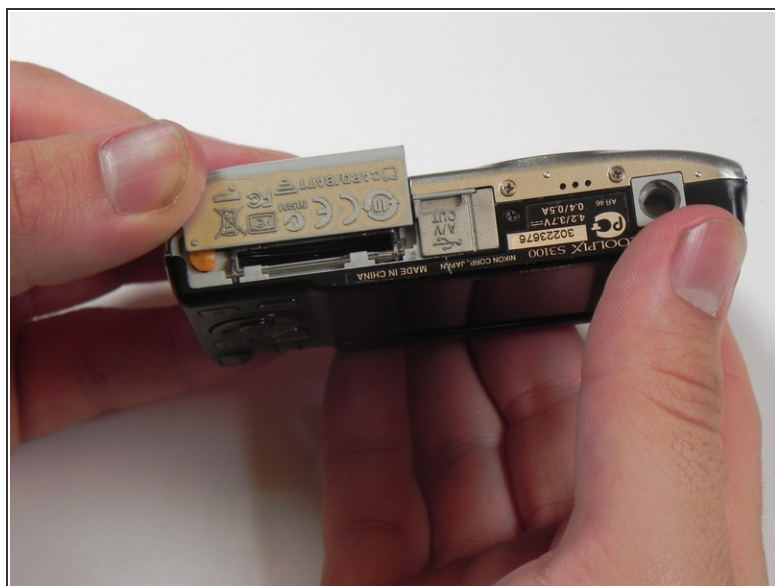


- The "Card/Batt" compartment should be located on the left side.
- Slide it away from you. (picture 2)

Step 3

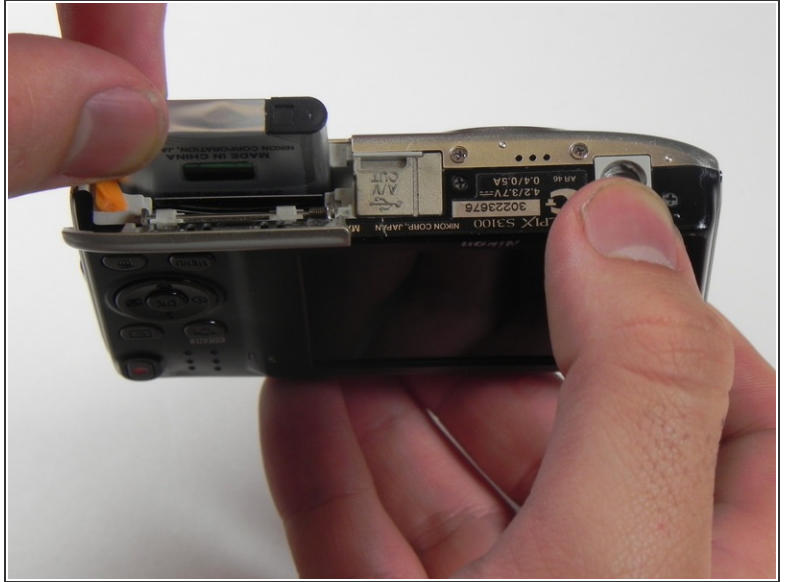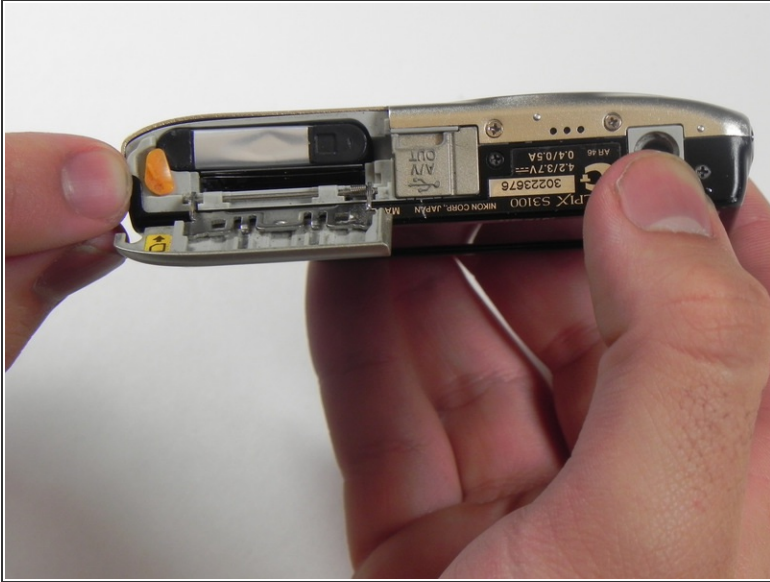

- Slide the orange tab to release the battery.
- The battery will spring up. Grab and replace.

Step 4

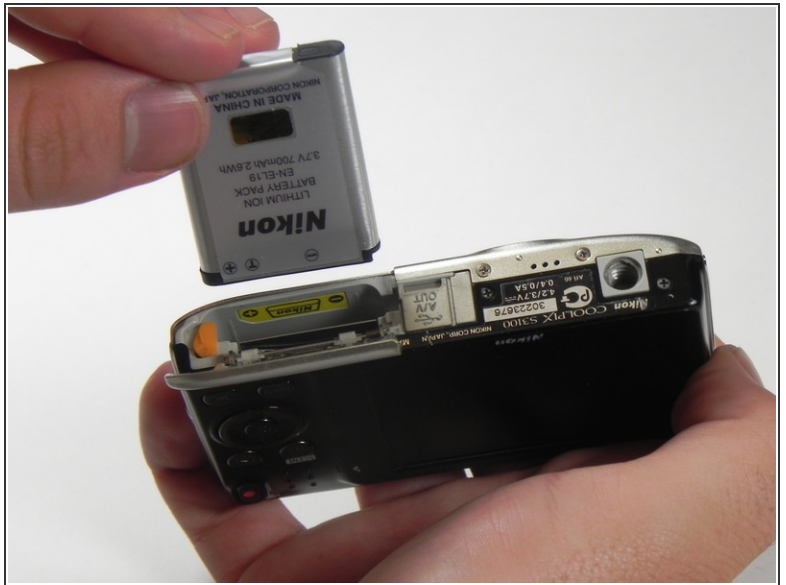

- Insert new battery with the arrow facing you or the front of camera.
- ❗ Battery replacement is a Lenmar DLZ319N.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 11:46:09 AM.